Albrecht DR314

DAB/DAB+/FM Radio

User Manual

Important Safety Notes

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THIS PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE. TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of insulated 'dangerous voltage' within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) , NO USER SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIEDSERVICE PERSONNEL.	The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produces heat.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments / accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- This appliance shall not be exposed to dripping or splashing water and no object filled with liquids such as vases shall be placed on the apparatus.
- Do not overload wall outlet. Use only power source as indicated.
- Use replacement parts as specified by the manufacturer.
- The product may be mounted to a wall only if recommended by the manufacturer.
- Upon completion of any service or repairs to this product, ask the service technician to perform safety checks.

Welcome
Thank you for purchasing the Albrecht DR 314 radio. Your DR 314 is designed to provide you with hours of music enjoyment with DAB (CD-quality), the new DAB + as well as FM.

Table of content

1. CONTENT OF PACKAGE.....3
2. OVERVIEW OF YOUR DR 314.....3
2.1 Front Panel.....4
2.2 Back Panel.....4
3. QUICK FUNCTION DESCRIPTION.....5
4. SPECIAL FUNCTIONS (INFO BUTTON).....6

1. Content of package

Please make sure that the following content are included in the package:

1. DR 314 Main unit
2. Power supply
3. User Manual

2. Overview of your DR 314

After taking your DR 314 out of the package, please spend some time to familiarize yourself with its features.

2.1 Front Panel

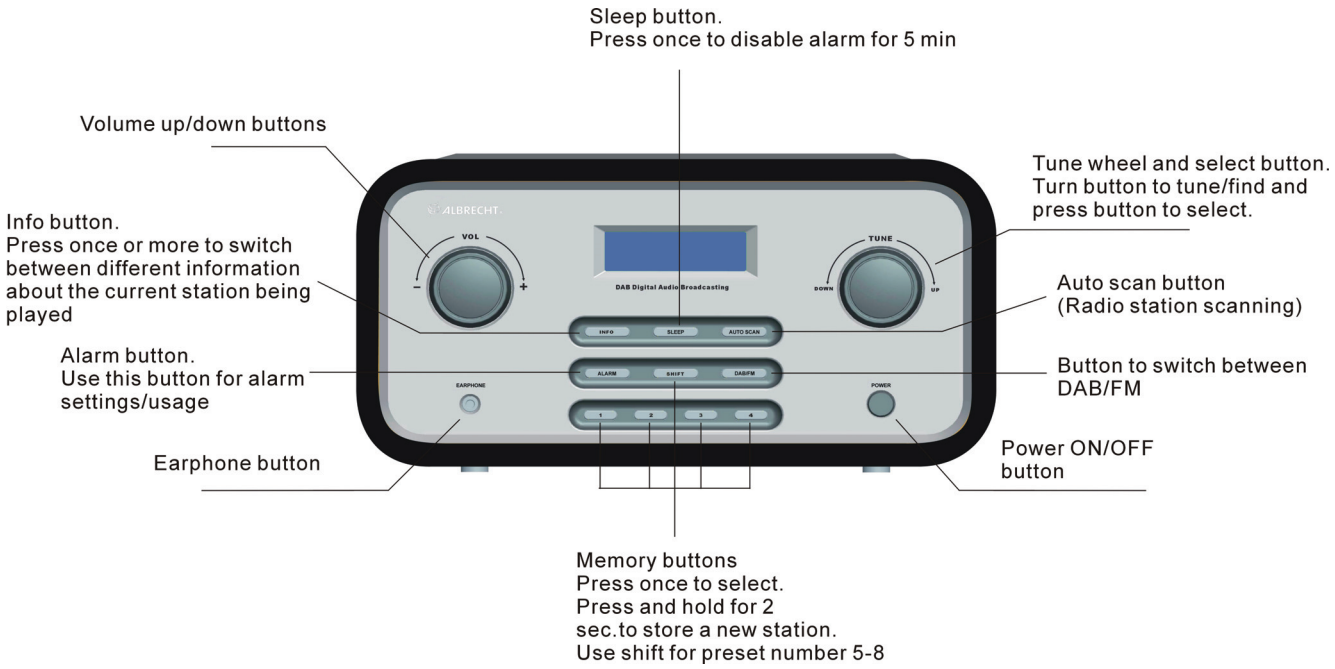

2.2 Back Panel

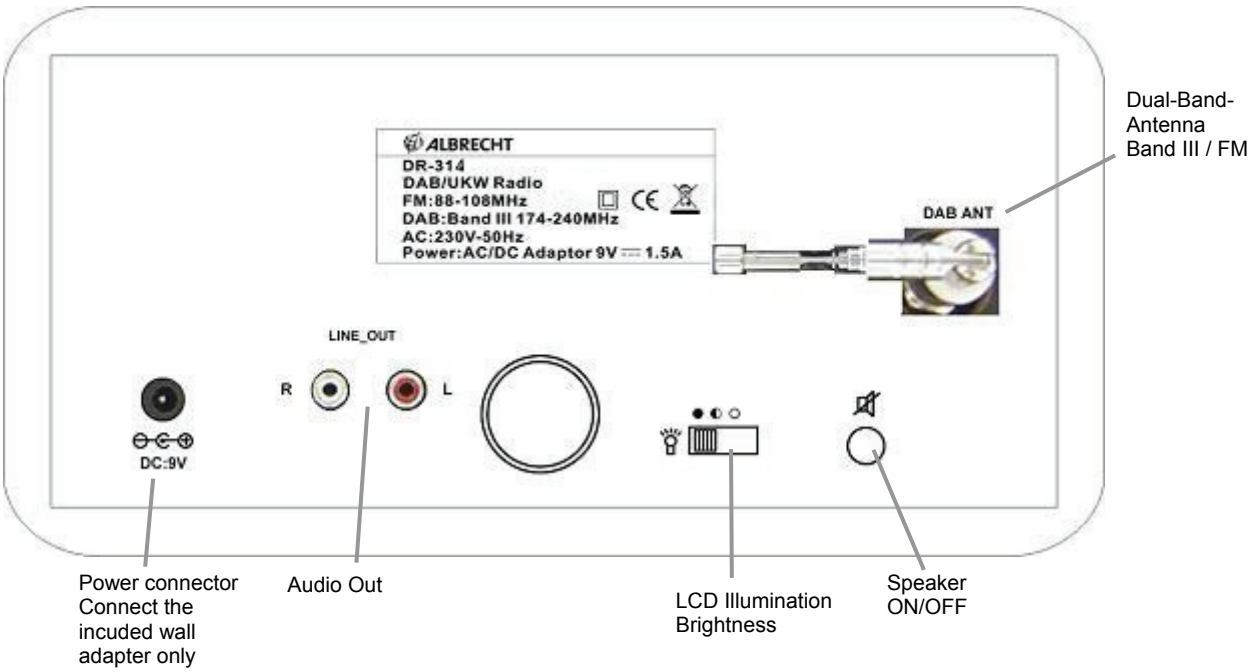

Important: "Tune wheel" has two functions. Turn wheel for different choices. Or press to select

3. Quick function description.

1) **Antenna**. Adjust antenna for best reception in your area. Antenna is used for both DAB and FM reception.

DAB/FM

2) **"DAB/FM" button**. Press this button to switch between DAB mode and FM mode. The first time DAB is chosen it will automatically scan for DAB stations in your area.

Auto Scan

3) **"Auto Scan" button.** Press this button to start automatic scan for radio stations. In FM mode it will automatically stop at the next frequency, which is broadcasting. In DAB mode it will quickly scan for DAB stations. Press and hold the button for a few seconds will start a new full scan for DAB stations. In FM mode you can also simply turn the "Tune" wheel to manually find radio (frequency). In DAB mode turning the "Tune" wheel will show you the different DAB stations available (Press "Tune" wheel to select DAB station).

INFO

4) **"Info" button.** Pressing this button once or several times will give show you various information in the LCD display about the the radio station being played.

5) **"Alarm" button**. This button must be used if you want to set/enable/disable alarms.

Alarm

- **a)** Press and hold the alarm button for 2 sec and the display will flash OFF. Now use the **"Tune"** wheel to switch between alarm ON/OFF. Press **"Tune"** to select ON (enable alarm).
- **b)** "00" will flash in display. Turn **"Tune"** wheel to adjust hour settings. Press **"Tune"** to select.
- **c)** "00" will flash in display. Turn **"Tune"** wheel to adjust minutes. Press **"Tune"** to select.
- **d)** "Radio" will flash in display. Turn the **"Tune"** wheel to change between Radio and Buzz alarm function. Press **"Tune"** button select your choice. A small clock symbol is shown in display when alarm is ON.
- **e)** Stop alarm. If you want to stop an alarm press "Alarm" button once.
- **f)** Deactivate alarm timer. If you want to deactivate your alarm timer simply press and hold the **"Alarm"** button. Then use the **"Tune"** wheel to change between ON/OFF. Choose OFF and press **"Tune"** wheel to select.

4. Special Functions (Info button)

System Reset Press and hold “Info” button for a few seconds. Display shows (Manual Tune). Press once the “Info” button. Now display shows (System Reset). Then press “Tune” wheel to select. Radio will now reset.

Firmware info Press and hold “Info” button for a few seconds. Display shows (Manual Tune). Press twice the “Info” button. Now display shows (Customer). Then press “Tune” wheel to select. Radio will now show firmware version number. This is for service info only.

Legal publications:
This radio is primarily intended for sales in Germany and adjacent countries. Please find our publications (as far as requested by European laws) about warranty, CE declaration and recycling matters on the last page of our German user manual.

© 2008 Alan Electronics GmbH - Daimlerstr.1 k – D- 63303 Dreieich
www.albrecht-online.de - www.alan-electronics.de
Service Download: www.service.alan-germany.de

Service Address:
PST professional support technologies GmbH
Breitscheider Weg 117a
40885 Ratingen
Hotline: 01805-012204 (14 Cent p. Minute from German fixed network)
e-mail: alan-service@ps-tech.de

Service for Switzerland:
Pocketmedia AG
Im Schossacher 12 - CH-8600 Dübendorf
www.pocketmedia.ch
Phone: +41 43 355 9308
Fax: +41 43 355 9309
Mail: support@pocketmedia.ch